T.M.WORKS Side Visor made for AW10/AW11 Instruction Manual

Content：Side Visor Left and Right One of each / Bracket A 2PCS, B 2PCS, C 4PCS / Bolt 8PCS
Sponge Tape A 2PCS, B 2PCS, C 2PCS

- Sponge Tape A　1cmx5cmx1c WxHxD
- Sponge Tape B　1cmx5cmx5n WxHxD
- Sponge Tape C　5cmx3mmx5l WxHxD
- Bolt　3x6 Truss Head Screw

⚠CAUTION

Be careful when performing this task, as it may scratch the car.

1. Verify the installation position of the side visor, and mark the screw hole locations on the glass using masking tape or a similar material.

2. Ensure that the mounting positions and markings for brackets A, B, and C are correct.

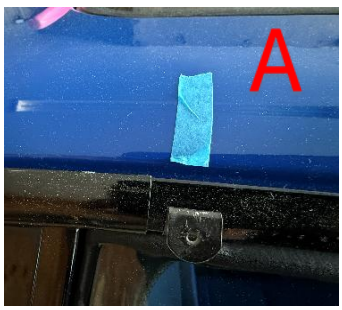

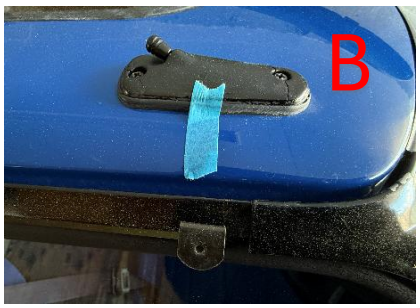

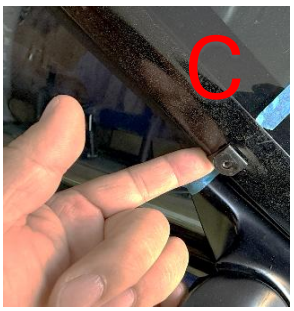

3. Temporarily install brackets A and B onto the upper section of the side visor.

Note:
Since this is a temporary installation, do not overtighten the screws.

T.M.WORKS

4. Place bracket D over the hole at the tip of the side visor, and secure it using sponge tape C.

5. Insert the upper part of the side visor from the window glass side while keeping brackets A and B attached.

6.Temporarily fasten the two bracket Cs in order from the top.

At this point, make sure that bracket D (indicated by the arrow) is securely hooked onto the side molding. If bracket D is not properly secured, there is a risk that it may come off while driving.

7. Ensure that the sponge tape on the back of the side visor is positioned on top of the roof molding, then fully tighten the screws.

T.M.WORKS

8. Insert sponge tape A (the thicker one) firmly between the roof molding and the side visor, and insert sponge tape B (the thinner one) firmly between the front windshield molding and the side visor.

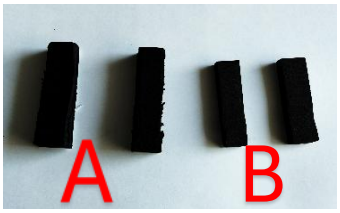

The image is provided as a general reference for the insertion position.
In practice, be sure to insert the tape firmly and deeply into place

Caution: Failure to perform this step may result in the side visor detaching at high speeds, which is extremely dangerous.
There have been cases where genuine side visors detached during driving due to gaps in this area, so please pay special attention to this step.

9. Installation is complete.

Although this product shares the same shape and installation method as the genuine side visor, we recommend using double-sided tape as an additional measure to prevent detachment due to wind pressure while driving.
As this product has a gel coat finish, we recommend applying a clear coat in advance if you plan to use it for an extended period.

T.M.WORKS